

# Come aggiungere una licenza ad un server Thinknx

- **Step 1** Copiare il codice licenza ricevuto in fase di acquisto.



Step 1: Codice licenza

- **Step 2** Accedere al server inserendo l'indirizzo ip\_address:5051 nel tuo browser web.



Step 2: Pagina web del server


- **Step 3** Inserire le credenziali di login(Default: "username: service, password:password").



Step 3: Accesso al server




- **Step 4** Andare in SERVER → Codici e licenze.

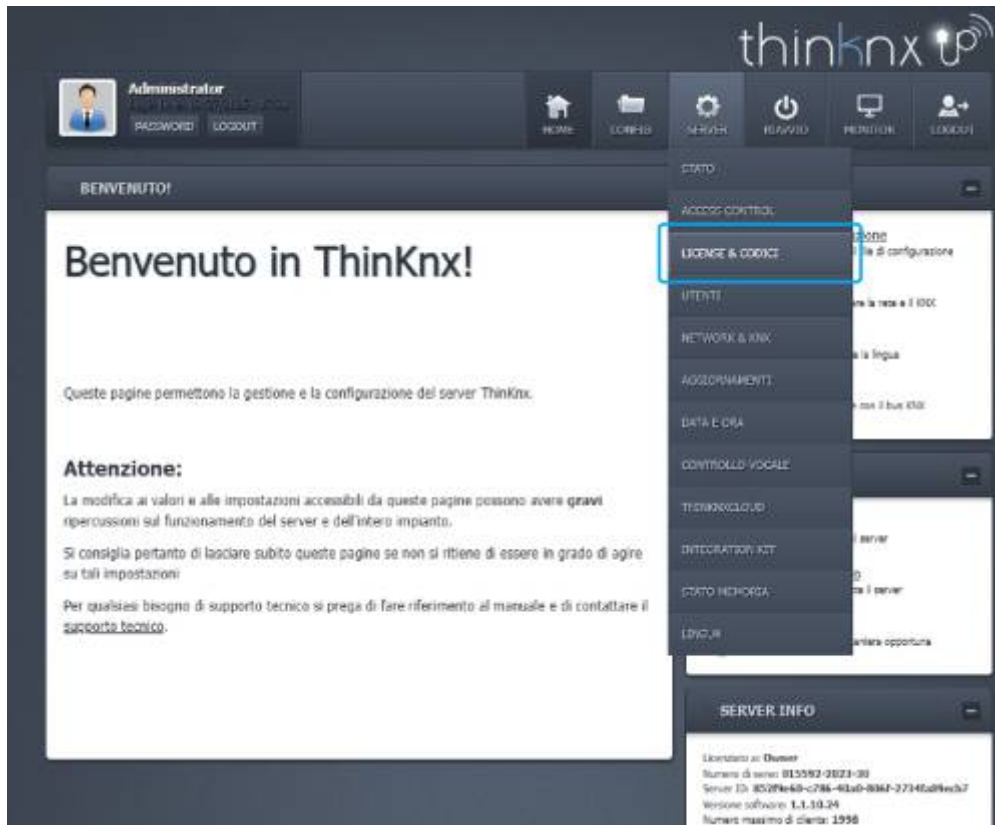


Step 4: Codici e licenze

- **Step 5** Incollare il codice licenza copiato nel campo di testo sotto "Licenze".

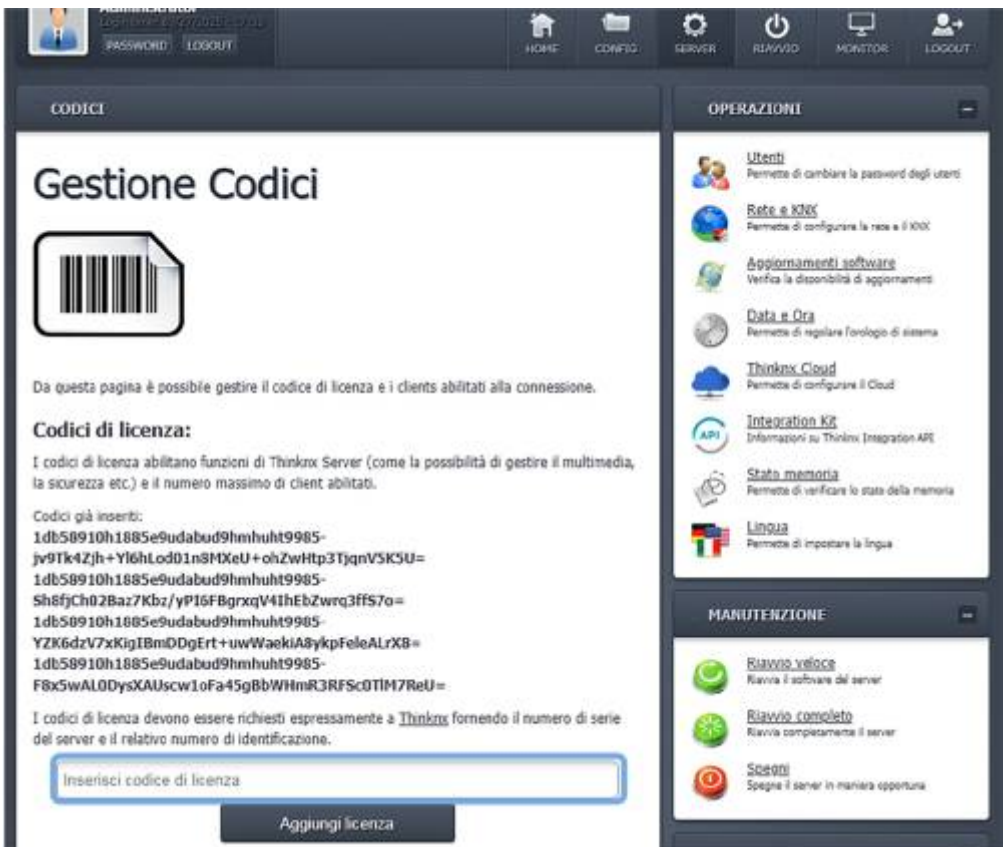

Step 5: Inserimento del codice

- **Step 6** Cliccare il pulsante “Aggiungi codice licenza” . .

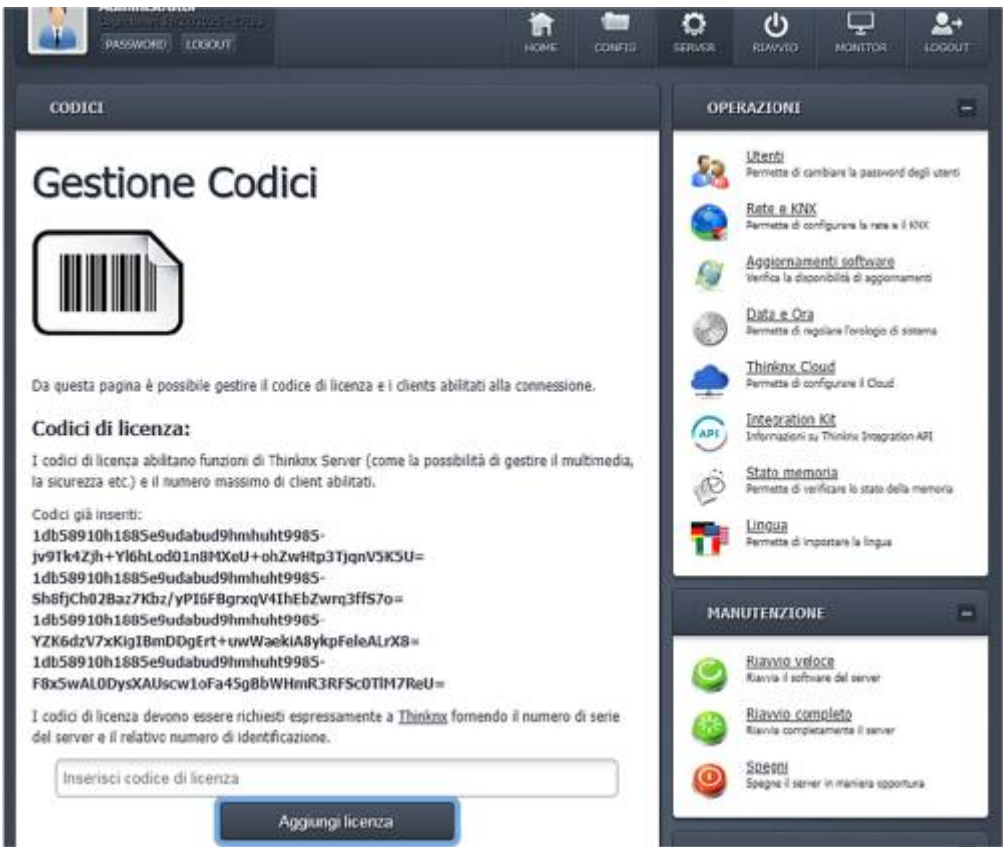

### Step 6: Aggiunta del codice

- **Step 7** Per verificare che la licenza sia stata attivata, andare in Server → Status



Step 7: Pagina Status

- **Step 8** Controllare in “Licenze abilitate” se la licenza appena inserita è attivata.

- Licenze abilitate:
  - KNX
  - Security appliances
  - Intercom
  - Modbus Gateway
  - Reports & Charts Engine
  - Infrared Gateway
  - Automation
  - Multimedia
  - Sonos Manager
  - Serial Gateway
  - Ethernet Gateway
  - Lutron Gateway
  - Sip PBX
  - Hue Gateway
  - BTicino MYHome Gateway
  - Z-Wave Gateway
  - Velux Gateway
  - ViaVai Access Control Level 3 license - unlimited keypads supported!
  - Voice Control

Step 8: Licenze abilitate

From:

<http://www.thinknx.com/wiki/> - **Learning Thinknx**

Permanent link:

<http://www.thinknx.com/wiki/doku.php?id=it:licensing>

Last update: **2025/04/08 14:51**

