

# KNX Input

## KNX

It represents an input coming from the KNX bus.

- **Input type:** the datatype of the value to read from KNX.
- **KNX group:** the KNX group address.
- **Value at startup:** policy to determine which value to assign to the input at the beginning of the execution of the logic scheme.
  - *'Read current value'*: indicates that the input starting value is equivalent to the value of the KNX group.
  - *'Wait for a new telegram'*: indicates that the input doesn't take any value until the receiving of a new telegram.
  - *'0 until first telegram'*: indicates that the input takes value 0 until the receiving of the first telegram.
  - *'1 until first telegram'*: indicates that the input takes value 1 until the receiving of the first telegram.

From:

<http://www.thinknx.com/wiki/> - **Learning Thinknx**

Permanent link:

[http://www.thinknx.com/wiki/doku.php?id=lm\\_input\\_knxinput](http://www.thinknx.com/wiki/doku.php?id=lm_input_knxinput)

Last update: **2019/03/20 17:04**

