

# KNX Output

## KNX

It represents the KNX group on which the value will be sent.

- **KNX group**: the KNX group address.
- **Output type**: the datatype of the value to write on KNX.

From:

<https://www.thinknx.com/wiki/> - **Learning Thinknx**

Permanent link:

[https://www.thinknx.com/wiki/doku.php?id=lm\\_output\\_knxoutput](https://www.thinknx.com/wiki/doku.php?id=lm_output_knxoutput)

Last update: **2019/03/20 17:04**

