



# Range Verifier

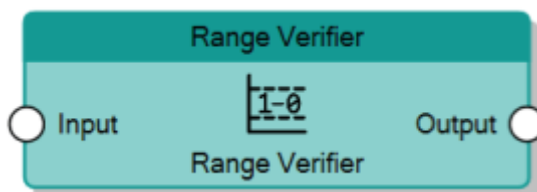

The Range Verifier node, given the analog value of the **Input** connector, checks if it is included between two threshold values, specified with the properties **Threshold Min.** and **Threshold Max.**, and sends 1 to the **Output** connector if the condition is verified, otherwise 0.

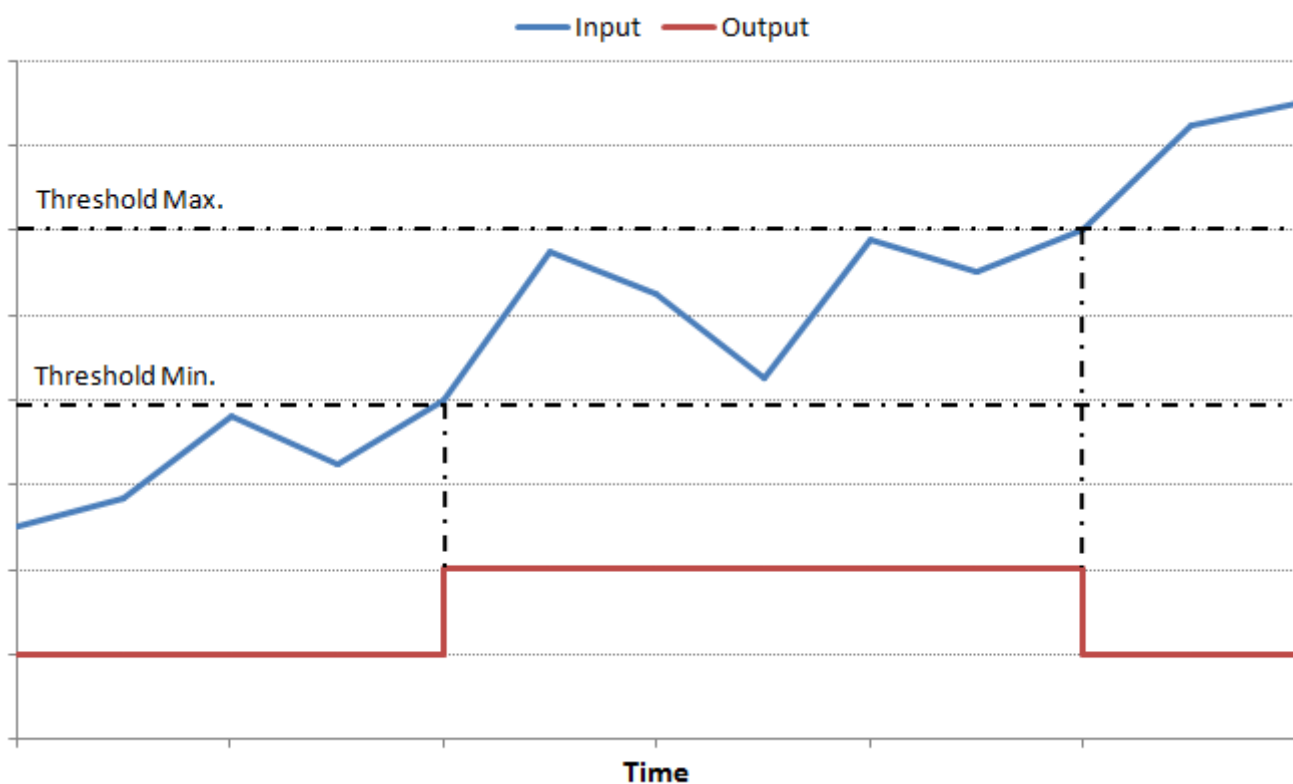

Behaviour of Range Verifier

From: <http://www.thinknx.com/wiki/> - Learning Thinknx

Permanent link: [http://www.thinknx.com/wiki/doku.php?id=lm\\_analog\\_range](http://www.thinknx.com/wiki/doku.php?id=lm_analog_range)

Last update: 2019/03/20 17:04

